GLOBE VALVE - RUBBER SEAT

Brass







•Water, oil & gas - 200 psi

•Temperature Rating: 180° F

•Rising stem



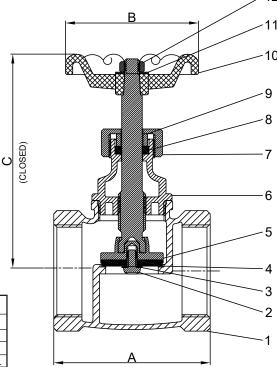

<u>MATERIALS</u>				
PART	MATERIAL			
1. BODY	CAST BRASS			
2. SEAT SCREW	BRASS ROD			
3. WASHER	STAINLESS STEEL			
4. SEAT	NBR			
5. DISC HOLDER	BRASS ROD			
6. BONNET	FORGED BRASS			
7. PACKING NUT	BRASS			
8. PACKING	TEFLON			
9. PACKING GLAND	BRASS			
10. HANDWHEEL	CAST IRON			
11. NAME PLATE	ALUMINUM			
12. HANDWHEEL NUT	STEEL			

Installation

Install in accordance with usual and customary installation techniques for fire sprinkler systems.

Use a suitable thread sealant on the male threads of the pipe being threaded into the valve body.

We recommend either Argco PTFE Thread Sealing Tape or Tuf-Glide Thread Sealing Paste with PTFE. NEVER USE BOTH.

DO NOT OVERTIGHTEN. OVERTIGHTENING MAY CAUSE CRACKS OR LEAKS.

DI	M	Εľ	NS	10	NS

ITEM #	SIZE	A	В	C
6520044	1/4"	1.77"	2.17"	2.32"
6520045	1/2"	1.89"	2.17"	2.85"
6520050	3/4"	2.17"	2.17"	2.93"
6520055	1"	2.48"	2.56"	3.43"
6520060	1-1/4"	2.91"	1.68"	4.08"
6520065	1-1/2"	3.31"	2.95"	4.88"
6520070	2"	3.94"	3.35"	5.38"

System No.	Location	
Submitted By	Date	

Spec Section	Paragraph	
Approved	Date	

